


Speeduay Brace Kit

Installation Instructions

part # 000-501

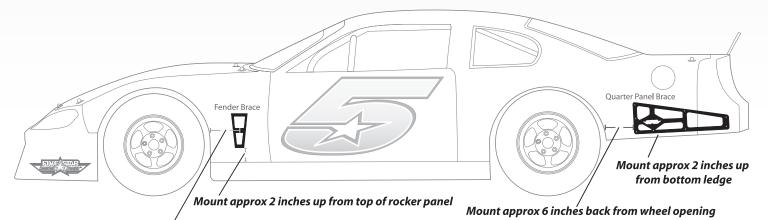

Mount approx 6 inches back from wheel opening to center of brace

SUPERSPEEDLINGER

*** SPECIAL NOTES TO PREPARE A RACE CAR FOR LARGE SPEEDWAYS ***

- Double brace all side body panels. Always mount 2 separate braces from the chassis. Air pressure is so strong at high speeds that a single brace may be too weak causing it to break easily and leaving the panel flapping in the air.
- Make it as solid as possible: Walk around the car and take your fist or a knee to knock each panel in multible areas to make sure the panels are braced enough to limit excessive flex. Flexing and flapping body panels will absolutely kill positive airflow. Also, note that properly braced Windshield, Quarter Windows & Rear Window is extremely important.
- Be cautious of the aerodynamic myths heard frequently. Five Star's bodies are designed to maximize the balance of front and rear aerodynamics, disrupting this balance may cause adverse effects on the airflow.
- Taping off the front nose air intake is recommended but make sure to leave enough open area so you will not overheat your engine. Remember, running a car alone in clean air during practice is different from running in the dirty air during a race.

Five Star Race Car Bodies PO Box 700 36728 89th St Twin Lakes, WI 53181

262.877.2171 www.fivestarbodies.com